

OWNER'S GUIDE

IMPORTANT

READ THIS IMPORTANT INFORMATION BEFORE USING YOUR STAND-UP PADDLEBOARD

DISREGARDING ANY OF THE SAFETY PRECAUTIONS AND INSTRUCTIONS CONTAINED IN THE OWNER'S MANUAL AND/OR ON THE PRODUCT MAY RESULT IN INJURY, INCLUDING THE POSSIBILITY OF DEATH.

- REVIEW THE WEIGHT CAPACITY LIMITATIONS OF THIS BOARD AND NEVER EXCEED IT. WWW. JIMMYSTYKS.COM

- ALWAYS WEAR A COAST GUARD APPROVED PERSONAL FLOTATION DEVICE (PFD).

- NEVER GO PADDLEBOARDING IN SEVERE WEATHER OR WATER CONDITIONS THAT MIGHT AFFECT YOUR ABILITY TO STEER THE BOARD OR RETURN TO SHORE.

- NEVER ALLOW MINORS TO USE THIS BOARD WITHOUT ADULT SUPERVISION.

- NEVER CONSUME ALCOHOL OR ANY OTHER SUBSTANCES THAT MAY IMPAIR YOUR COORDINATION, JUDGEMENT, OR ABILITY TO SAFELY PADDLE THE BOARD.

- NEVER USE THIS BOARD BEYOND YOUR SKILLS OR ABILITY.

- NEVER USE THIS PRODUCT AFTER SUNSET, BEFORE DAWN OR AT ANY TIME IN POOR LIGHTING.

- CHECK LOCAL LAWS AND REGULATIONS REGARDING PROPER AND SAFE USE OF THIS PRODUCT.

- NEVER LEAVE BOARD EXPOSED TO DIRECT SUNLIGHT WHEN OUT OF THE WATER.

- DO NOT STORE PADDLE BOARD IN A WET BOARD BAG FOR EXTENDED PERIODS OF TIME.

- DO NOT LEAVE BOARD IN BAG UNDER DIRECT SUNLIGHT.

- TIGHTEN VENT CAP BEFORE TAKING BOARD INTO THE WATER.

- REGULARLY INSPECT VENT CAP O-RING FOR CRACKS, TEARS AND/OR DAMAGE BEFORE USE.

- FOR BEST VENTING, REPLACE YOUR CAP AND CAP SEAL ANNUALLY.

- REGISTER YOUR JIMMY STYKS®PADDLEBOARD ONLINE TO ACTIVATE PRODUCT WARRANTY.

TABLE OF CONTENTS

SECTION 1 MODELS, FEATURES AND ACCESSORIES	PAGES 4 - 13
SECTION 2 care and maintenance	PAGES 14 - 15
SECTION 3 JIMMY STYKS®VENTED HANDLE USE	PAGES 16 - 19
SECTION 4 FINS AND INSTALLATION	PAGES 20 - 21
SECTION 5 LEASH AND INSTALLATION	PAGES 22 - 23
SECTION 6 PADDLES PADDLE SIZING	PAGES 24 - 25 PAGES 26 - 27
SECTION 7 TRANSPORTATION TIPS	PAGE 28
SECTION 8 LIMITED WARRANTY INFORMATION	PAGE 29

questions/comments: 1-800-370-0745

limmy Styks:com



FEATURES

- CAMERA MOUNT
- C LEASH PLUG
- FIN BOX/FCS STYLE PLUGS
- PRODUCT SERIAL NUMBER


RIDER COMPATIBILITY

RIDER SKILL	NOVICE	PRO	VOLUME
ENVIRONMENT	FLATWATER	SURF	221 LITERS
DURABILITY	FRAGILE	RUGGED	
PERFORMANCE	STABLE	AGILE	270 POUNDS

SPECIFICATIONS

LENGTH	11'6" (351.5 CM)
WIDTH	32" (81 CM)
THICKNESSS	4.7" (12 CM)
ROCKER (N)	5" (12.7 CM)
ROCKER (T)	3" (7.6 CM)



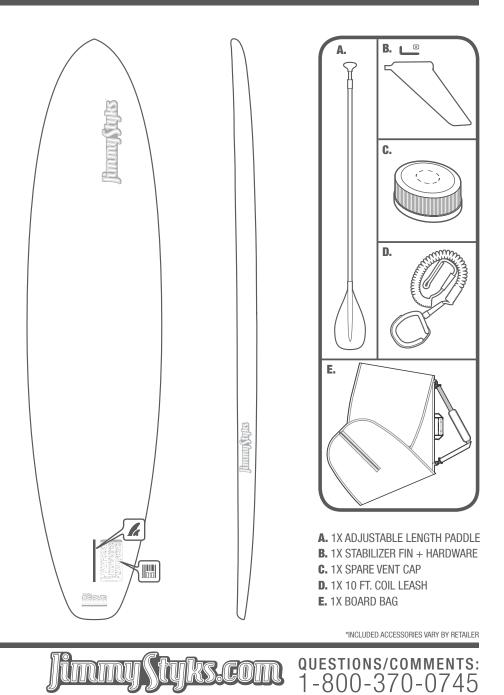

MODELS, FEATURES AND ACCESSORIES



FEATURES

CAMERA MOUNT
CAMERA MOUNT
CAMERATHING VENT
CAMERATHING V

RIDER COMPATIBILITY

STABLE

RIDER SKILL ENVIRONMENT DURABILITY

PERFORMANCE

NOVICE FLATWATER FRAGILE


RUGGED AGILE


PR0



SPECIFICATIONS

LENGTH	11'4" (345 CM)
WIDTH	31" (79 CM)
THICKNESSS	4.7" (12 CM)
ROCKER (N)	6.5" (16.6 CM)
ROCKER (T)	3" (7.6 CM)

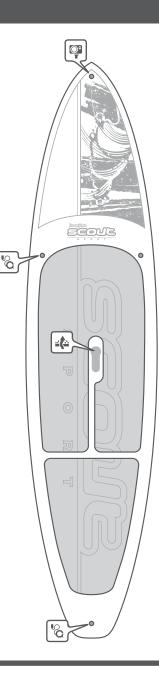

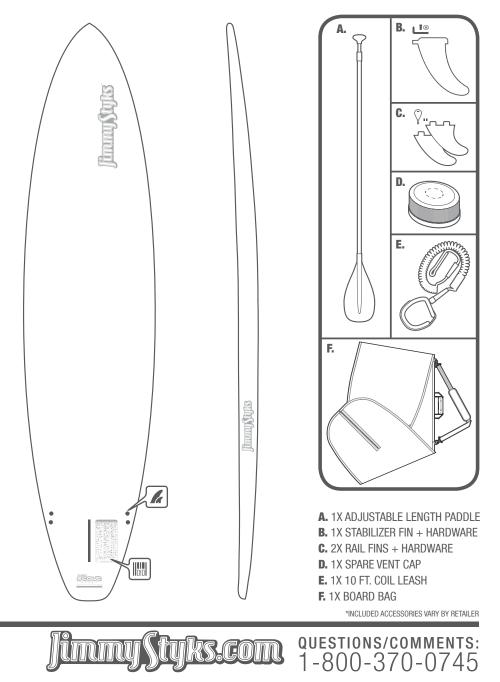



FEATURES

CAMERA MOUNT SELF-BREATHING VENT C LEASH/UTILITY PLUG FIN BOX/FCS STYLE PLUGS **IIIII PRODUCT SERIAL NUMBER**

RIDER COMPATIBILITY


RIDER SKILL ENVIRONMENT DURABILITY PERFORMANCE STABLE


NOVICE FLATWATER FRAGILE

PRO 205 SURF IITERS RUGGED 255 AGILE

SPECIFICATIONS

LENGTH	11'0" (335.3 CM)
WIDTH	31" (78.7 CM)
THICKNESSS	4.7" (11.9 CM)
ROCKER (N)	5.5" (14 CM)
ROCKER (T)	3" (7.6 CM)

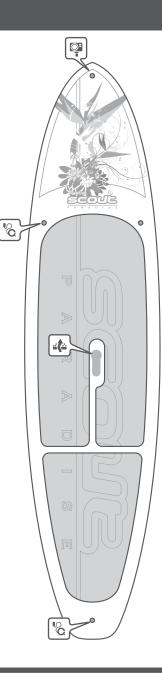

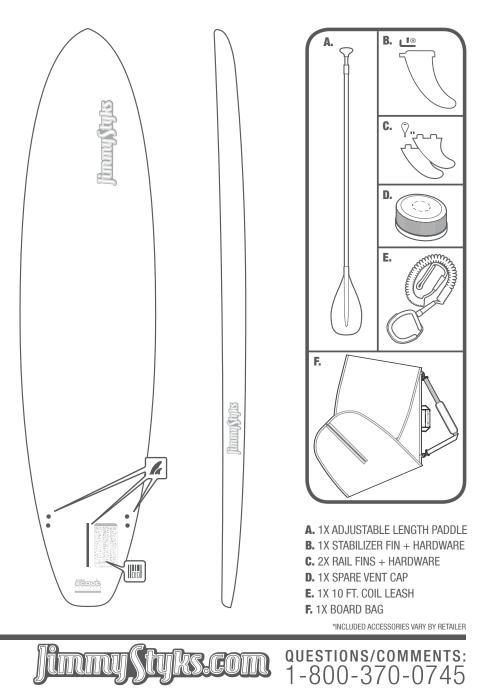

MODELS, FEATURES AND ACCESSORIES



FEATURES


CAMERA MOUNT
 BUNGEE TIE-DOWN SYSTEM
 ELF-BREATHING VENT
 LEASH/UTIITY PLUGS
 FIN BOX/FCS STYLE PLUGS
 PRODUCT SERIAL NUMBER

RIDER COMPATIBILITY

RIDER SKILL	NOVICE	PRO	VOLUME
ENVIRONMENT	FLATWATER	SURF	297 LITERS
DURABILITY	FRAGILE	RUGGED	LIMIT 350
PERFORMANCE	STABLE	AGILE	JJU POUNDS


SPECIFICATIONS

LENGTH	12'6" (381 CM)
WIDTH	32" (81.3 CM)
THICKNESSS	6.6" (16.8 CM)
ROCKER (N)	5" (12.7CM)
ROCKER (T)	3" (7.6 CM)

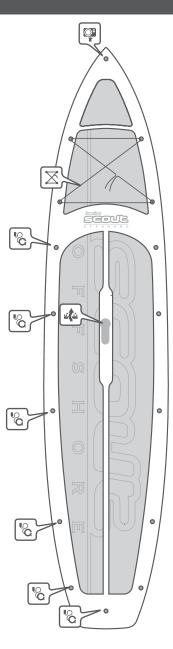



MODELS, FEATURES AND ACCESSORIES

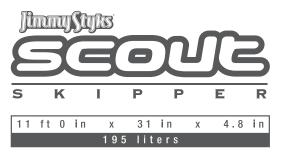

FEATURES

C LEASH PLUG

RIDER COMPATIBILITY

RIDER SKILL ENVIRONMENT DURABILITY PERFORMANCE

NOVICE	_	
FLATWATER	_	
FRAGILE		RI
STABLE		



PRO


RUGGED

AGILE

SURF

SPECIFICATIONS

11'0" (335 CM)
31" (78.8 CM)
4.8" (12.1 CM)
NA
NA

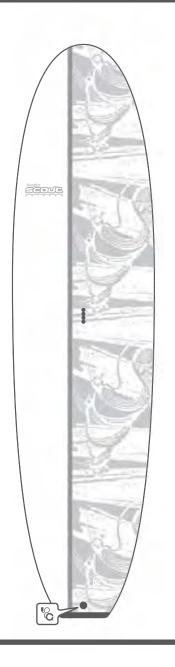



questions/comments: 1-800-370-0745

*INCLUDED ACCESSORIES VARY BY RETAILER



KEEP IN A WELL VENTILATED, SHADED AREA WHEN NOT IN USE.

Direct sunlight can damage a board if left exposed for a period of time. At approximately 74°C (165°F) all EPS foam begins to out-gas, become unstable and delaminate. Delamination is characterized by a separation of the board's core from the protective epoxy skin. Delamination is a damage that is not repairable and should be avoided at all costs. Keep your board in an area with good air flow and circulation. Leaving your board in a vehicle during the day (closed or open) elevates the risk for delamination. Even on a mild day at 21°C (mid-to-high 70°F), the inside of a car can reach 77°C (170° F), well above the out-gas temperature threshold.

LIMIT EXPOSURE OF DIRECT SUNLIGHT TO THE DECK AND TRACTION PAD.

While the benefits of a non-slip traction pad are obvious, they also increase the risk of overheating and delamination. While in use, water flowing over the deck helps to regulate surface temperature. But when the deck traction pad is dry, the effects of heat absorption are amplified when exposed to direct sunlight. In addition, traction pad colors may lose vibrance over time due to the bleaching effects of the sun. If you must expose your board to direct sunlight during transport or temporary storage, it is safest to keep the white (bottom) facing up.

DO NOT STORE YOUR BOARD IN A BOARD BAG FOR EXTENDED PERIODS OF TIME.

Board bags are intended for transportation protection, not full time storage. Prolonged storage of a wet board in a wet board bag will have adverse effects on the finish of your board, leading to the possibility of mold, and osmotic blisters. Storing your board in a board bag is not the same as placing it in the shade. Board bags will collect heat and potentially overheat your board.

RINSE SAND AND SALTWATER DEPOSITS FROM YOUR BOARD AFTER USE.

Sun, sand and saltwater will degrade any man-made material over time. Rinse off sand and saltwater deposits from your paddle board with fresh water and store in a cool, dry environment after each use.

INSPECT YOUR BOARD FOR DINGS AND CRACKS BEFORE AND AFTER EACH USE.

The EPS Core of your board is highly absorbent and acts as a sponge when the protective watertight epoxy skin is compromised. To prevent your board from becoming waterlogged (heaviness and drag as a result of water absorption), regularly inspect the exterior for dings and cracks. If you spot a crack, patching with epoxy is the preferred method of repair. JIMMY STYKS®boards use minimal colored paints/decals in areas prone to damage so repairs can be made with minimal aesthetic disruption.

OVERHEATING YOUR PADDLEBOARD IS NOT COVERED BY JIMMY STYKS® MANUFACTURERS WARRANTY!




REGISTER YOUR JIMMY STYKS®

Register your JIMMY STYKS[®] SUP online to activate your product warranty. **jimmystyks.com/registration.php**



QUESTIONS/COMMENTS: 1-800-370-0745

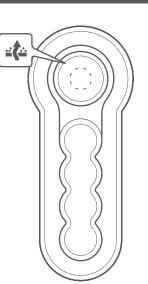

The JIMMY STYKS[®] selfbreathing board vent is conveniently integrated into the carry handle located approximately mid-length on the deck-side.* As temperatures within the core increase, air trapped within the watertight skin of the board expands. The vented handle allows the heated air to escape effectively reducing internal pressure.

NOTE: Later SCOUT models may feature a different vent handle with new security features. If your vent handle looks different than the handle pictured above, please refer to pages 18-19.

CLOSE THE VENT BEFORE EACH USE OPEN THE VENT AFTER EACH USE.

While the JIMMY STYKS® vent handle comes equipped with a self-breathing GORE-TEX® membrane, it is always a good habit to manually vent your board after use to ensure ALL pressurized air escapes. To manually vent the board, simply unscrew and remove the vent cap. When manually venting, always remember to replace the vent cap before entering the water again. The EPS foam core acts like a sponge and will rapidly absorb water until the board is heavy and full of water. Self-Breathing Cap with GORE-TEX® Membrane O-Ring

▲ INSPECT O-RING FOR CRACKS OR TEARS

When planning a day out, inspect the vent cap o-ring for cracks, tears or damage. A broken o-ring seal can lead to water entering the core. If a replacement o-ring or cap is required, visit our replacement parts store online: www.jimmystyks.com/parts.html or call toll-free: **1-800-370-0745**.




NEED REPLACEMENT PARTS?

Visit our replacement parts store online: www.jimmystyks.com/parts.html or call toll-free: 1-800-370-0745.



QUESTIONS/COMMENTS: 1-800-370-0745

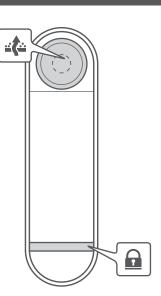


The JIMMY STYKS® selfbreathing board vent is conveniently integrated into the carry handle located approximately mid-length on the deck-side.* As temperatures within the core increase, air trapped within the watertight skin of the board expands. The vented handle allows the heated air to escape effectively reducing internal pressure.

The JIMMY STYKS® vent handle features a general purpose secure utility bar. In combination with a standard bike lock or padlock, you can thwart board-snatchers when leaving your board unattended.

*EXCLUDING SOFT, INFLATABLE AND IRONHIDE SUPS

CLOSE THE VENT BEFORE EACH USE OPEN THE VENT AFTER EACH USE.

While the JIMMY STYKS® vent handle comes equipped with a self-breathing GORE-TEX® membrane, it is always a good habit to manually vent your board after use to ensure ALL pressurized air escapes. To manually vent the board, simply unscrew and remove the vent cap. When manually venting, always remember to replace the vent cap before entering the water again. The EPS foam core acts like a sponge and will rapidly absorb water until the board is heavy and full of water.

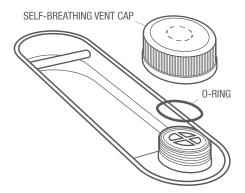

INSPECT O-RING FOR CRACKS OR TEARS

When planning a day out, inspect the vent cap o-ring for cracks, tears or damage. A broken o-ring seal can lead to water entering the core. If a replacement o-ring or cap is required, visit our replacement parts store online: www.jimmystyks.com/parts.html or call toll-free: **1-800-370-0745**.



NEED REPLACEMENT PARTS?


Visit our replacement parts store online: www.jimmystyks.com/parts.html or call toll-free: 1-800-370-0745.




QUESTIONS/COMMENTS: 1-800-370-0745

FINS AND HARDWARE


JIMMY STYKS[®] includes a center stabilizer or racing fin and rail fins (depending on model and fin configuration). We recommend removing fins after each use to prevent damage to the fin, fin box and board.

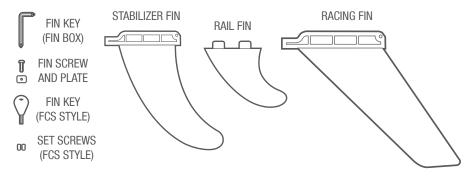

RAIL FIN INSTALLATION

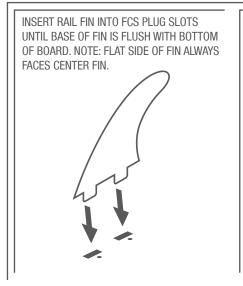


USE FIN KEY TO SECURE FINS. AVOID OVER-TIGHTENING SCREWS.

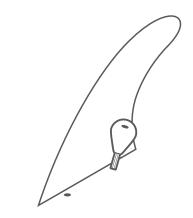

CENTER FIN INSTALLATION


STEP 1

INSERT SCREW PLATE INTO FIN BOX SLOT AND SLIDE PLATE FORWARD.

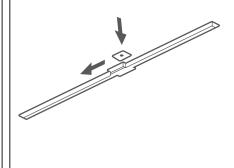


STEP 2

INSERT FIN INTO FIN BOX SLOT).

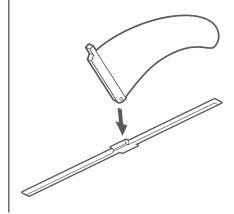


STEP 3

ROTATE FIN FORWARD AND ALIGN FIN SCREW WITH SCREW PLATE.

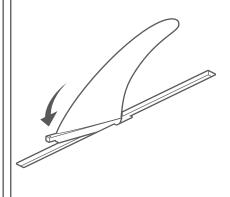

STEP 4

ADJUST FIN TO DESIRED POSITION AND TIGHTEN FIN SCREW.

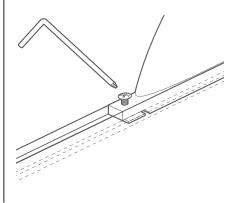


QUESTIONS/COMMENTS: 1-800-370-0745

ks.com


LEASH VARIATIONS

JIMMY STYKS[®] provides one of two leash variations (standard or coil) and a leash loop with your SUP accessory package. It is recommended that you remove your leash after use to prevent unintentional snagging. Wrapping a leash around board and fins may result in damage to the leash.

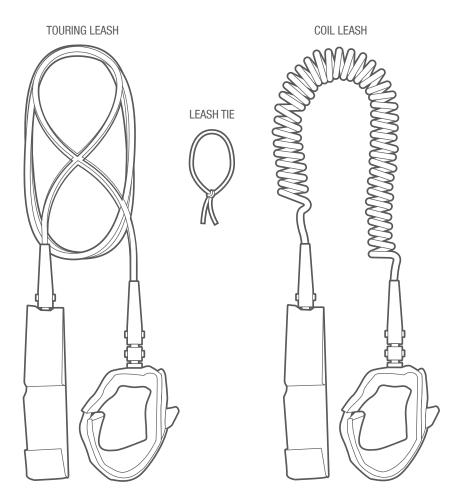


LEASH AND INSTALLATION

HOW TO MAKE A LEASH LOOP

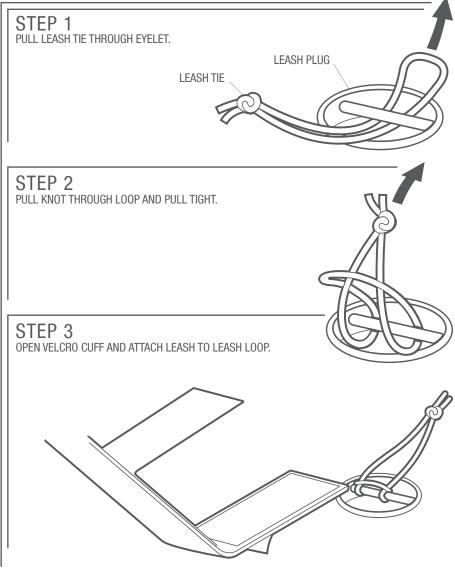

Jimmy Styks.com questions/comments: 1-800-370-0745




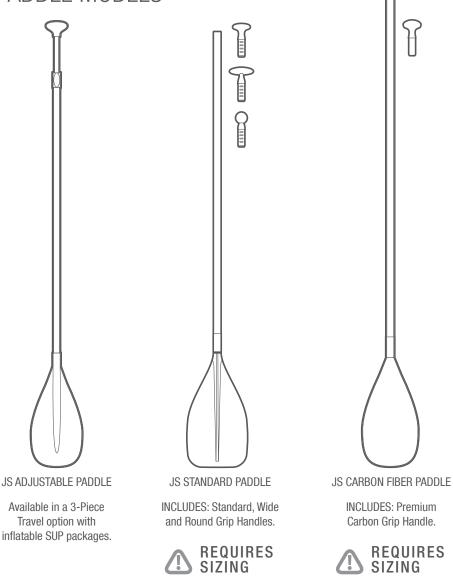

FOR BEST RESULTS, LEARN TO USE THE PADDLE CORRECTLY.

Paddles have a FORWARD and BACK facing side. The ribbed side of the handle, adjustable lever and "JIMMY STYKS" logo on the blade indicate the FORWARD facing side. Additionally, blade should be in a FORWARD ANGLE (as shown on right).

Proper paddle orientation while paddling will maximize stroke efficiency and move the greatest volume of water when paddling. By practicing proper paddling techniques, you will be able to paddle longer and farther while conserving energy.

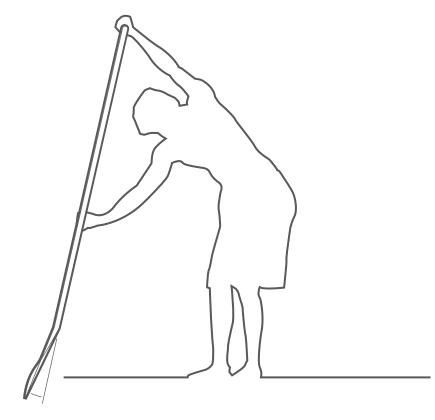




JS ADJUSTABLE PADDLE SIZING

DO NOT EXTEND UPPER SHAFT BEYOND 24 IN (61CM).


Extending beyond the maximum extension limit can result in permanent damage to the adjustment clip while paddling. We recommend paddle to be rinsed with fresh water after every use and upper shaft removed for drying.

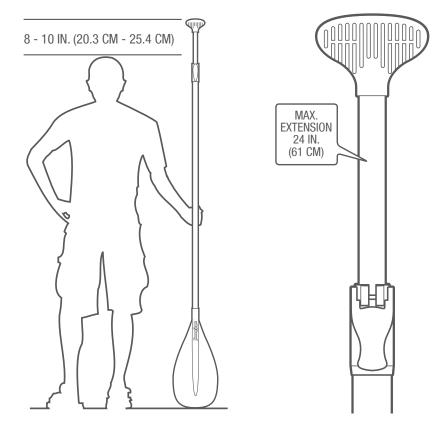

JS STANDARD AND CARBON FIBER PADDLE SIZING

SIZING THE PADDLE WILL REQUIRE THE FOLLOWING TOOLS/SUPPLIES:


Measuring Tape, Hacksaw, Pen/Pencil or Masking Tape, Adhesive (Use Silicone for JS Standard Paddles; Use Epoxy for JS Carbon Fiber Paddles).

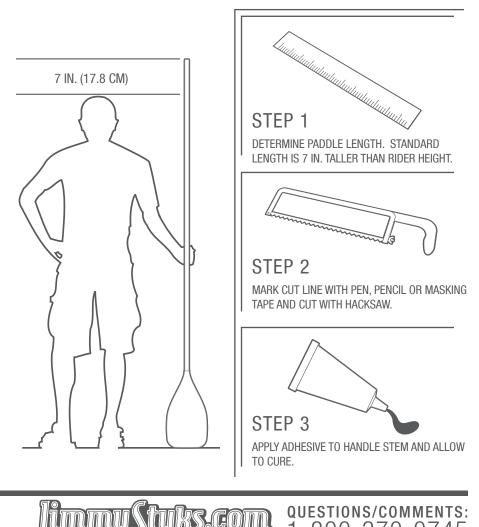

1-800-370-0745

WHEN STRAPPING TO ROOF, BOARD SHOULD BE BOTTOM SIDE UP.

When securing your paddle board to the roof of a vehicle, always place the board bottom side up. Placing the board topside up will create wind drag and instability while driving. Placing board nose forward or tail forward are both acceptable means of transport.

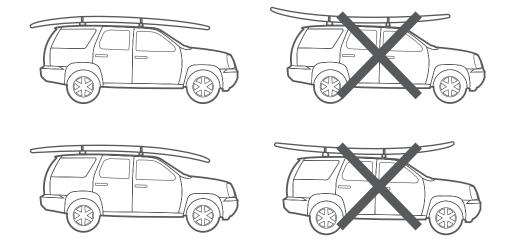

OVER-TIGHTENING STRAPS MAY RESULT IN PRESSURE DINGS.

PADDED STRAPS ARE RECOMMENDED
 OVER NON-PADDED NYLON STRAPS.

JIMMY STYKS®OFFERS A LIMITED 365 DAY WARRANTY AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

TERMS OF WARRANTY:

Your JIMMY STYKS[®] product is guaranteed to be free of defects in material and workmanship for a period of no more than 365 days from the date of purchase. If the product does not conform to the warranty, JIMMY STYKS[®], at its discretion will issue a new, like new, or similar model product, excluding any shipping charges. Warranty extends to original purchaser only and is non-transferable. Sales receipt and original packaging materials are required.

WARRANTY:

JIMMY STYKS® will make every effort to produce boards to the highest quality and standards in the industry. We do quality checks in our factories in Asia and in our warehouses in North America in an effort to guarantee each board's guality before shipping. Because of the nature of surfing and paddle boarding we cannot warranty the performance of any board or shape for individual riders and varying levels of skills and abilities. Furthermore, we cannot guarantee against damage or breakage and cannot protect or warranty against circumstances outside of our control. In the event of a new board being removed from a box and not in good condition please contact the office for resolution. You will be asked for a copy of vour sales receipt and photos of the damage in question, as well as original packaging material to verify if damage was due to shipping. If it is deemed a manufacturing or material flaw, we will issue an RMA number. This number along with the damaged product will need to be returned to the closest warehouse (Vancouver or Huntington Beach) at customer's expense. Upon physical review, JIMMY STYKS® will make its final determination as to the nature of the damage or flaw and issue a replacement product (model depends on availability), or store credit. Shipping will be the responsibility of the customer. We are not responsible for damage or defects once the board has been used. Damage is defined as impact with any object or material, damage due to dropping, loading, unloading, or transport, alterations or modifications, repairs, natural disasters, fires, temperatures below 4.4 °C (40 °F), or above 43 °C (110 °F), any further use of a board once a claim has been reported, transport or storage of a board with a closed air valve, use of a board in the water with a loose or removed air valve, failure to clean and service air vent valve, storage of a board in extremely hot or humid conditions including a wet or damp board bag.

RETURNS AND EXCHANGES:

JIMMY STYKS[®] will exchange any new, unused product for company credit providing it is accompanied by an original sales receipt and all original packaging. This will not include any shipping charges or expenses. Product must be in new condition and will be subject to the inspection of staff.



NEED TO FILE A WARRANTY CLAIM? Submit a warranty form

and photos online: www.jimmystyks.com/ warranty.php



questions/comments: 1-800-370-0745 



VISIT US ONLINE

Discover our latest products and information online: www.jimmystyks.com



MADE IN CHINA