

DISTRIBUTION PANEL 2

Warning: Do not cut out resistors in wire harness.

Note: Do not confuse the white neutral current carrying wires, sometimes called "ground", with the green non-current carrying wires, sometimes call grounding. These two wires must only be connected at the source of power, nowhere else.

Please refer to the 360 Panel System Installation Manual for additional installation information.

NOTE 1: For 120V Genset, supply Line to terminals 1 and 9, Neutral to terminals 5 and 13.

Panel	Switch	L	
Part Number	Part Number	Inches	Millimeters
1481, 1482, 1484, 1485 1489	9009, 9010 6337	0.35	9
1480, 1483 1486, 1487 1488	9011, 9019 9077, 9093	0.60	15

Wire Strip Length

* For 230V applications



Panel Wiring Schematic AC Rotary Switch Source Selection Panel 1480/1489 (1489 shown for reference)