


50A BOOT INSTALLATION INSTRUCTIONS

(Wiring Device Cover)



1 Cut boot at first line, if cord is greater than 5/8". Invert tapered end of the boot and apply soap solution.

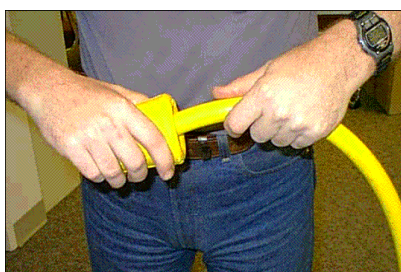


2 Push cord through the inverted end about 18". A tug in the opposite direction returns boot to its original shape.



3 Push cord through the plug/connector housing.



4 Strip cord and attach to device (see device's instructions).

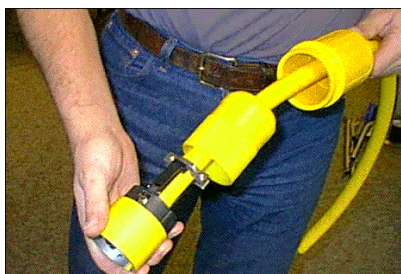

5 Lubricate mouth of boot and rear shoulder of device with soap solution and pull into place.



6 Be sure boot is on as far as it will go.

Note: This product is part of an assembled system that meets IP56 where consisting of the following components: (1) female connector, (2) weatherproof cover with threaded ring and (3) connector cap.

11/05

100407

MARLNCO


2655 Napa Valley Corporate Drive
Napa, California 94558
(707) 226-8600 FAX: (707) 226-9670

50A BOOT INSTALLATION INSTRUCTIONS

(Wiring Device Cover)



1 Cut boot at first line, if cord is greater than 5/8". Invert tapered end of the boot and apply soap solution.

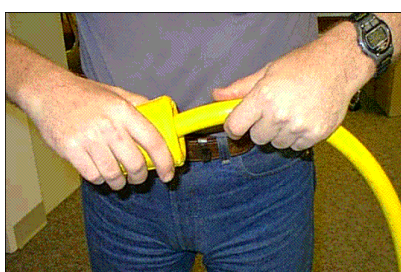


2 Push cord through the inverted end about 18". A tug in the opposite direction returns boot to its original shape.



3 Push cord through the plug/connector housing.



4 Strip cord and attach to device (see device's instructions).

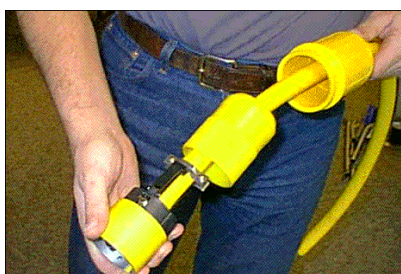

5 Lubricate mouth of boot and rear shoulder of device with soap solution and pull into place.



6 Be sure boot is on as far as it will go.

Note: This product is part of an assembled system that meets IP56 where consisting of the following components: (1) female connector, (2) weatherproof cover with threaded ring and (3) connector cap.

11/05

100407

MARLNCO

2655 Napa Valley Corporate Drive
Napa, California 94558
(707) 226-8600 FAX: (707) 226-9670