

Contact Information**Graphic Artist:**

Joel Tarbox, Tarbox Art & Design
 Phone: 831.336.3723
 Fax: 831.336.3723
 E-mail: joel@joeltarbox.com

West Marine Contact:

Tom Oller, Merchandising
 Phone: 831.761.4860
 Fax: 831.763.4962
 E-mail: tomol@westmarine.com

File Information**File Name:** 5497086_Ladder_Wrap.eps**Description:** 9" x 21" Packaging Label**Colors:** 4-color process on white; see Color Information**Date of Proof:** 12/19/03**UPC Code:** 0 25282 02914 3**Model #:** 5497086**Printer Information****1.** The color on this proof is not necessarily accurate.

Please refer to your Pantone color chart for accurate Pantone color matching.

2. Changes cannot be made to the artwork without prior approval from West Marine.**3.** THIS FILE IS NOT TRAPPED.**4.** DO NOT PRINT DIE LINES.**Color Information****Cyan****Magenta****Yellow****Black**

West Marine
 500 Westridge Dr.
 Watsonville, CA 95076
 Made in China
 www.westmarine.com

- Always shut down engine and allow propeller to stop before using ladder
- Always use ladder facing the vessel
- Always keep away from pinch points when folding or extending ladder
- Always step in center of tread, not to either side
- Never dive or jump from ladder
- Never use ladder with more than one person at a time
- Routinely check mounting points for loose hardware or damage

Usage Guidelines:

9. When not in use ladder can be folded up and out of the water, or completely removed and stowed.
8. Attach a lanyard to your ladder and secure to boat

7. Install ladder on mounting hardware. Ensure ladder is mounted vertically. If necessary, shorten lower standoffs using metal cutting saw or lengthen standoffs using spacers to obtain a vertical installation. Ladder should not angle inwards or outwards when properly installed.

6. Install mounting brackets securely using stainless thru-bolts and backing plates with locking nuts. Use polyurethane sealer when installing hardware to prevent water intrusion and damage around mounting holes.

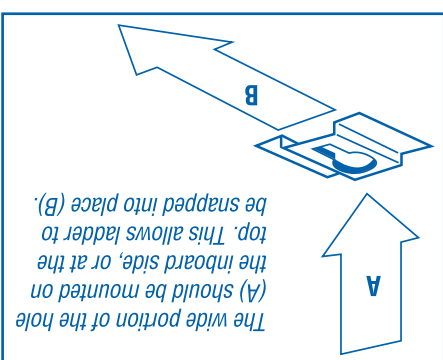
5. Position mounting brackets with the wide portion of the keyhole slot towards the inboard side of the gunwale and drill holes for mounting hardware.

4. Check finger & toe clearances at each rung. There should be a minimum of 5" (12.7 cm) between the hull surface and outside of each tread per ABYC guidelines.

3. Check for items behind mounting bracket locations to prevent damage when drilling holes.

2. Check for interferences with other items with the ladder in both up and down configurations before mounting brackets.

1. Locate a convenient boarding location on the gunwale that is reasonably flat and has a reasonably vertical corresponding hull surface. Provide as much clearance from the propeller as possible. Avoid weak or un-reinforced areas to prevent damage. Position the ladder so that the lowest tread of the ladder will be at least 12" (30.48 cm) below the surface when fully extended.

Mounting Instructions:**West Marine****West Marine****5-Step Folding Boarding Ladder****West Marine****Stainless Steel****5-Step Folding Boarding Ladder**

Model 5497086

- 5 steps with non-skid plastic treads, 2 fixed, 3 folding
- 9" (22.9 cm) step spacing for easy boarding
- Designed for nearly vertical gunwales
- Mounting brackets and backing plates included
- Easily folds out of the way when not in use
- 39 1/4" (99.7 cm) folded length, 56 1/2" (22.2 cm) extended length, 14" (35.6 cm) wide

**Gunwale Mount Series**